P9IV Specification

1 Product



Figure 1 - PIV Design

2 Product Features

2.1 Overview of Technology Features

ltem	Feature	
Bluetooth	BT2.1+EDR/3.0/4.1LE/4.2/5.0 BLE	
WiFi	802.11 a/b/g/n/ac	
Network	Full Netcom 4G, supporting China Mobile, China	
	Unicom, and China Telecom	
Sim card slot	Nano SIM	
TF card slot	Support MicroSD expansion, up to 512G	
Memory	3GB	
Storage	32GB	
Indicator	2 pcs	
Key	28 pcs	
Electronic Blisters	Support	
Electronic Compass	Support	
Camera	13-million pixels of rear camera, with flash	
	Three galaxies with single frequency, GPS、	
GNSS	GLONASS、BeiDou	
	Single point position, no raw data output	

2.2 Details

2.2.1 Physical Feature

Size	221.5*82.0*27mm
Weight	450g
Operating temp.	-30 °C to +60 °C
Storage temp.	-40 °C to +80 °C
Protection Class	IP67
Humidity	5%-95 %, anti-condensing
Drop	Withstands 1.2 m drop onto hard surface

2.2.2 System Platform

Operating system	Android11, 8 core 2.0G
Memory	3GB LPDDR4X
Storage	32GB
External storage	Up to 512GB

2.2.3 Interfaces

Screen	5.0 inch HD touch screen	
Key	28 keys, 2 indicators, details see part 2.2.5	
Connector	Std Type-c, for charing and data transmission	
Communication	B/T: BT2.1+EDR/3.0/4.1/4.2/5.0 BLE	
	WiFi: 2.4G/5G, 802.11 ac/a/b/g/n	
Network	GSM: 850/900/1800/1900	
	WCDMA:B1/B2/B4/B5/B8	
	LTE-TDD:B38/B39/B40/B41	
	LTE-FDD: B1/B2/B3/B4/B5/B7/B8/B12/B13/B17/B20/B28	
Other	External storage card slot	
Other	External SIM card slot	

2.2.4 Power supply

Internal Battery	3.85V, 6400mAh, 24.64Wh
Input voltage	DC 5V3A / 9V2A
Adaptor	Type-C PD Adaptor
Operating time	Above 15 hours

2.2.5 Definition of Keys and Indicators



Figure 2 - P9IV Keys' Design

No.	Кеу	Definition	
	Keys with numbers	To enter numbers	
	Keys with functions (Related function refers to orange icons when	Orange voice icon on key "1"	Voice input to make Surpad perform some voice commands (under development)
1		Orange camera icon on key "2"	Can call up the Camera button
activat	activating)	Orange screenshot icon on key "3"	Take a quick screenshot
		F1-F5	User can define
2	Key for measuremet	When Surpad interface isn't displayed, press to open or switch to Surpad interface.	

		When Surpad interface is on display, press to collect data.		
		Move up, down, left, and right on the screen or menu in function		
3	Keys for direction	state, the up and down keys are for volume control; in the function		
		state, the left and right keys are for screen brightness control.		
4	Recent Key	Call the list of recent apps		
5	Home Key	Back to Home Page		
6	Return Key	Back to last interface		
		Confirm/line feed		
7	Enter key	In Surpad interface, this key is used to collect data in the non-input		
		state		
8	Delete Key	Delete one character before enter other characters.		
9	Tab Key	Make table		
		When using the physical keyboard as input method, this key can		
10	5 Shift Key switch between numbers, lowercase		and uppercase letters.	
		Fn mark will prompt in the upper notification bar when pressing this		
11	Fn Key	key, meaning the functions marked by orange icons on keys can be		
		used.		
	Power LED	In standby mode	Solid red: power is <15%.	
12			Off: power is >15%.	
12		In charging	Flashing green: in charging	
			Solid green: full of charge	
13	Power button	Turn on/off device		
14	WiFi/Bluetooth LED	Blue: handheld is connected with receiver B/T.		
		Green: handheld is connected with receiver WIFI.		
		Off: handheld isn't connected through B/T or WIFI.		